



DDC 75 CRAWL DEHUMIDIFIER



OWNER'S MANUAL

SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE

GENERAL INFORMATION

Thank you for choosing our LGR Dehumidifier

This Owner's Manual will provide you with valuable information necessary for the proper care and maintenance of your new dehumidifier.

Please take a few moments to read the instructions thoroughly and familiarize yourself with all the features and operation of this dehumidifier.

PLEASE READ THESE INSTRUCTIONS CAREFULLY BEFORE USING THE PRODUCT.

Unpackaging the dehumidifier

Please do not dispose of any packaging until you have checked the appliance is operational.

After removing the packaging ensure the contents are intact and complete. In the unlikely event of missing parts; contact your retailer.

Do not leave children unattended with any of the packaging since it is a potential source of danger. Disposal of all packaging must be carried out responsibly & safely and in accordance you're your local authority regulations.

Always recycle the packaging material where possible. When using any electrically powered product, basic safety precautions should always be followed.

IMPORTANT INSTRUCTIONS

 
 


When using any electrical appliance, Basic safety precautions should always be followed.

WARNING - to reduce the risk of fire, electrical shock or injury to persons or property:

1. Always operate the product from a power source of the same voltage, frequency and rating as indicated on the product identification plate.
2. Close supervision is necessary when any product is used by or near children the elderly or the infirm. Do not allow children to use the appliance as a toy.
3. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities or lack of experience and knowledge unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
4. Do not operate any product with a damaged power cord or plug, after the product malfunctions, dropped or

- damaged in any way. Return the complete product to the place of purchase for inspection, repair or replacement.
5. To reduce the risk of electric shock, do not expose the unit or flexible cord to moisture of any kind.
 6. Switch off and unplug from the power socket when not in use, before assembling or before cleaning.
 7. Do not place objects on the product or allow objects to obstruct the inlet or outlet openings, or operate in close proximity to walls or curtains, etc.
 8. The use of attachments or accessories not recommended or sold by the product distributor may cause injury to persons or damage to property.
 9. Do not attempt to dismantle the appliance.
 10. Do not operate the appliance on a metal surface.
 11. Do not use the appliance in artificially hot or humid conditions or allow to be used in a hazardous environment. Consult the product Specifications section for approved operating conditions.
 12. Do not clean the appliance with organic solvent.
 13. This Owner's Manual is an integral part of the appliance and should be stored for safe keeping and must always accompany the appliance in the event of ownership transfer or for reference to by a service engineer.

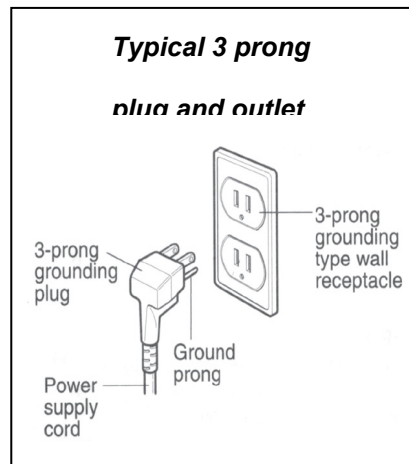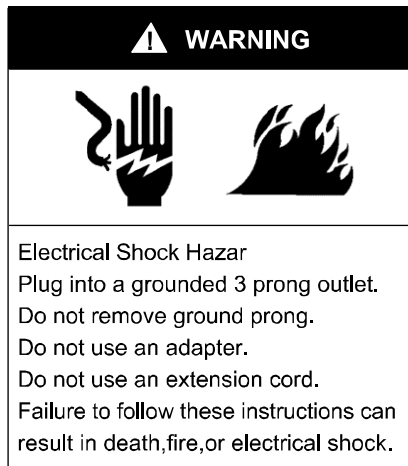

PRODUCT IDENTIFICATION

FIG.A: FRONT


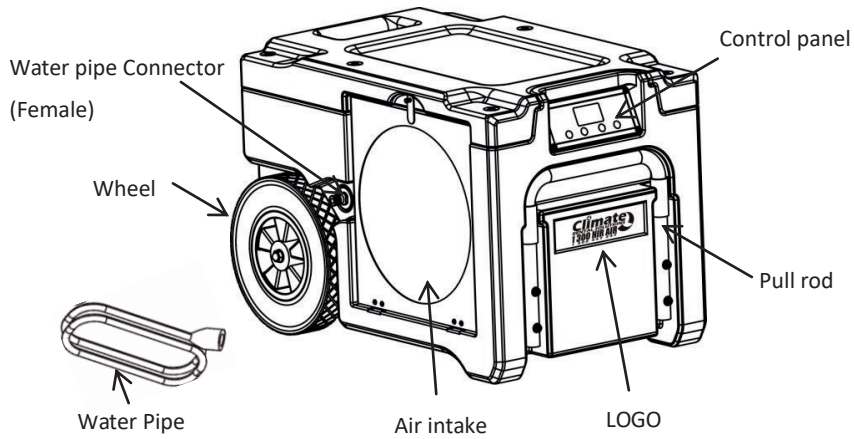 


FIG.B: REAR

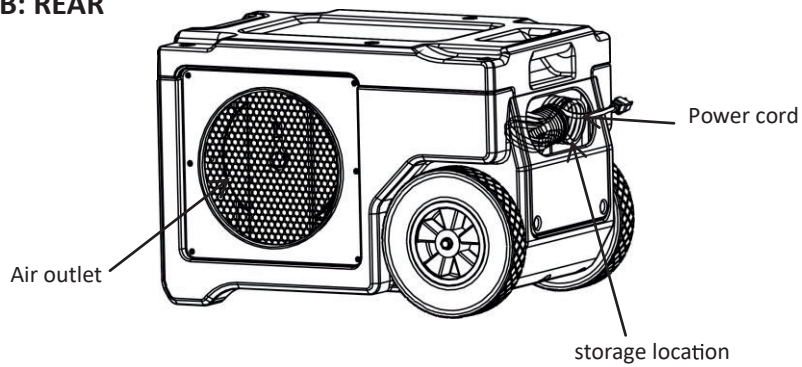 

PRODUCT IDENTIFICATION

SETTING UP THE DEHUMIDIFIER:


WARNING No not obstruct the air intake or air outlet

IMPORTANT Place dehumidifier in the upright position. When transporting a dehumidifier to site, allow the dehumidifier to stand for 30 minutes before switching ON. This is necessary to allow the refrigerant system to stabilize and avoid system damage.

PLACE IN ENCLOSED AREA: For best results, operate the dehumidifier in an enclosed area to create a “drying chamber.” Close all doors and windows that open to external areas to maximize the dehumidifier’s water removal efficiency. Keep traffic through the drying chamber to a minimum. Place the dehumidifier in the center of the room away from walls and furnishings where airflow may be obstructed.

PROPER AIRFLOW IS ESSENTIAL: Do not place this dehumidifier in a position where the front Air Intake Grill or rear Air Outlet is blocked by walls, furniture or any other obstruction.

 
Illustration of correct positioning for best performance:

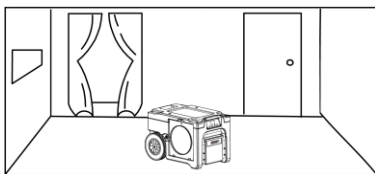


ENSURE PROPER DRAINAGE: This dehumidifier contains a built-in pump that connects to a drainage hose which is stored in the back of the unit. Uncoil the entire hose to ensure that there are no kinks or restrictions and place the unattached end into a drain or run to the outdoors. Ensure that water piped to the outdoors does not create a slipping hazard. To avoid damaging or overworking the pump, do not exceed a 3m vertical lift height between the pump and drain.

CONTROL PANEL





Digital Control Panel

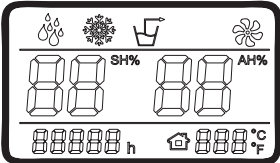






- Read owners manual before operation.
- Caution: Check machine and filter daily.



  
- This unit needs a grounded power supply.
- Do not block air intake or outlet.
- Do not move or tilt the machine when it is running.



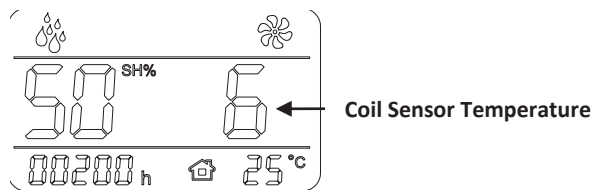


 




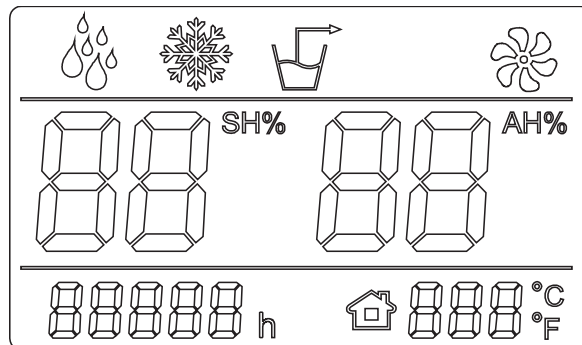


-  **ON/OFF:** Press once to turn the unit **ON** or **OFF**.
-  **PURGE:** Press the “**PURGE**” key to empty water from the pump reservoir. During normal operation the pump purges automatically when the reservoir is full. Use “**PURGE**” before moving the machine to avoid water spillage. The pump will close automatically after forty seconds continuous operation.
-  **FUNCTION:** Press the “**FUNCTION**” key, The screen will display ‘Humidity setting’ ‘Ambient humidity’ ‘Total running hours’ ‘Ambient temperature’.
-  **REGULATE:** Press “**REGULATE**” key to adjust humidity or set total running hours and job hours or setting fahrenheit and centigrade. Long press “**REGULATE**” key 5 seconds, The coil sensor temperature will display. The screen will return to display ambient humidity after coil sensor temperature cursor flashing 3 seconds.



The LCD displays symbols



 
-  : Dehumidify ON.
-  : Defrost ON.
-  : Draining.
-  : Fan start up
-  : Setting humidity.
-  : Ambient humidity.
-  h : Total running hours.
-  °C °F : Ambient temperature.

OPEARTION

Plug in electrical cord

This dehumidifier must be plugged into a grounded polarized 220~240 VAC/50Hz outlet rated at least 15 amps. Make sure the drain hose is connected and routed to a safe location.


Plug in electrical cord, The screen will display standby:

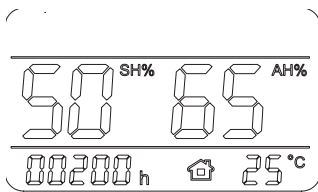

Turn the unit ON


Press the "ON/OFF" key to turn the unit on.

 If humidity setting is less than ambient humidity, the unit will entry to dehumidify mode. The screen will display:

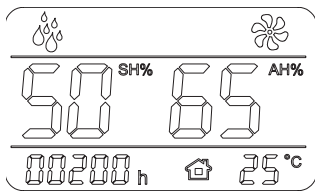

If humidity setting is greater than ambient humidity, the unit will stop working after started 1 minute.

Turn the unit OFF



Press the "ON/OFF" key to turn the unit OFF. When the unit turns OFF, The water pump will turn on automatically for 40 seconds to drain the residual condensate water in the dehumidifier. The screen will appear draining  cursor.



IMPORTANT! - To avoid water spillage. Do not move the dehumidifier for at least three minutes after turning the power off. Before transporting, be sure to remove the external drain hose, drain it carefully, and return it to the pocket provided on the back of the unit.

 
Humidity setting

The factory setting is continuous. The humidity can be set in the following manner:

1. Press the function key  , The humidity setting the cursor flashing.
2. Press the regulate key  to setting the desired humidity level. Increases or decreases are in increments of 5%. Adjust humidity is between CO, 25% and 95%.
3. Wait 3 seconds after setting the desired humidity is completed, the unit will automatic recognition of numerical.

NOTES:

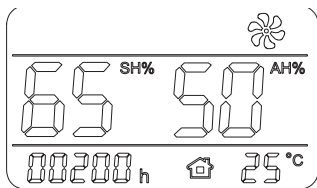

1. When the adjusting humidity is between 25% and 95%.the unit will stop working while reaching the setting humidity, the screen will displays :



 
NOTE: The fan will start up 1minute after every 30minutes, It can increase validity of the humidity sensor. The unit will automate resume operation after detecting the condition humidity above the setting humidity.

2. When the adjust humidity is below 25% . the “CO” will be displayed. The unit will entry to continuous dehumidify mode.

Total running hours display and job hours display setting



1. Press the function key  twice, the cursor turns to the total running hours , The total running hours the cursor flashing.
2. Press the regulate key  to switch to job hours.
3. Wait 3 seconds after switch to job hours is completed, the unit will automatic recognition of numerical.

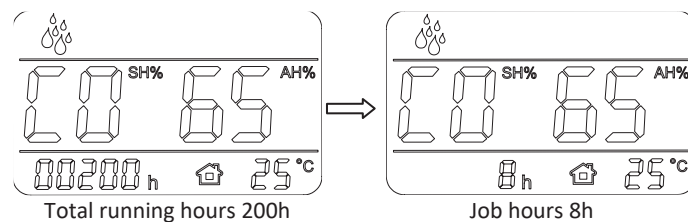For example as follows:

 


NOTE: The “Total running hours” field displays continuously during operation. Like a car odometer, this shows the total number of hours on the unit and cannot be manually reset outside the factory.

Centigrade and Fahrenheit setting

1. Press the function key  thrice, the cursor turns to the centigrade , The centigrade the cursor flashing.
2. Press the regulate key  to switch to fahrenheit.
3. Wait 3 seconds after switch to fahrenheit is completed, the unit will automatic recognition of numerical.

For example as follows:

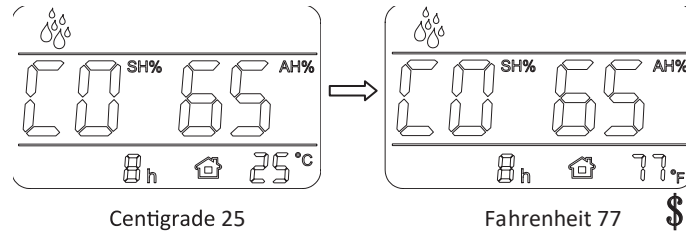


MAINTANCE

Cleaning Or Replaced Filter

NOTE: The working performance of the dehumidifier will be greatly reduced if the filters are clogged. Check filter weekly. Cleaning or replaced filter if get clogged.

 Ensure the dehumidifier is turned OFF and plug is removed from the power outlet before performing maintenance.

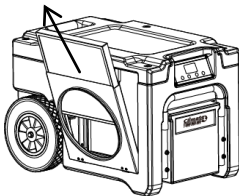

1. Remove the filter as shown.
2. Vacuum any debris from the filter.
3. Using lukewarm water and a mild detergent wash the filter and allow to dry.
4. Once dry, re-install the filter into the dehumidifier.

The item 2`3 refer only to type of can cleaning filter.

 
Cleaning Water tank

NOTE: Cleaning Water tank once when unit running time reach to 1000 hours.

Ensure the dehumidifier is turned OFF and plug is removed from the power outlet before performing maintenance.

1. Remove 8pcs screws to take apart front housing of the dehumidifier.
2. Remove 4pcs screws to take apart water pump.
3. Cleaning the water storage tank, Use a vacuum cleaner with a brush tool and a soft cloth to remove any debris.


Take care not to damage any interior components.

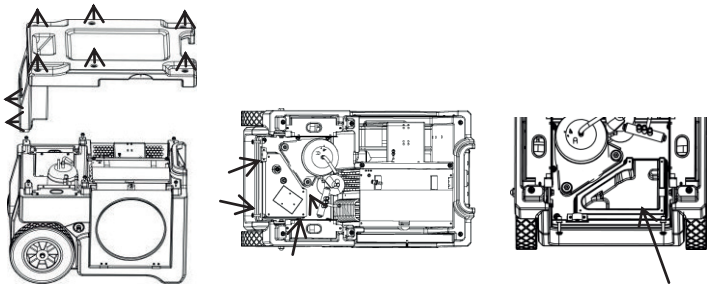

STORING THE UNIT

Storing the unit

 Follow the guidelines below when storing the unit:

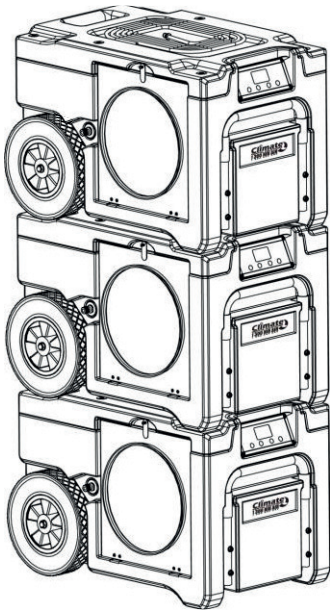

1. Prior to storing the unit, clean filters and drain water from the unit.
2. Put the power cord and water pipe to the storage location for back of the unit.
3. If necessary, stack machines as shown.

NOTE: Do not stack more than 3 machines high. Be sure to secure the machines to ensure they do not fall or move.

TROUBLE SHOOTING

FAULT	CAUSE	SOLUTION
Unit does not operate	No power to machine. Unit not switched on.	Plug in unit; check power at outlet and at base of unit. Switch unit on.
Fan not turning	Obstructed air outlet and fan.	Remove obstruction.
Unit operating, but room not dry	1. Not enough time to dehumidify air. 2. Poor air movement in room. 3. Excessive moist air infiltration in room.	1. Allow more time for drying. 2. Increase air movement with fans. 3. Reduce outside air infiltration into the room.
Unit collects too little water	1. Room air is dry. 2. Obstructed filter and coils 3. Room temperature is too low.	1. Check humidity with hygrometer. 2. Check filter and coils; clean as necessary. 3. Increase room temperature.

WARNING:

DO NOT attempt to rectify faults using unqualified personnel. If the problem you are experiencing is not listed here, call your local distributor

Fault codes

The table below shows error messages that the system may report. If the display shows an “ER” message, first unplug the unit and then plug it back in. This may reset the electronics and no further action may be necessary. If an error message reappears, use the table below to help identify the problem.

CODE	ER1	ER2	ER4
Error message	Coil sensor error	Humidity sensor error	Water pump fault or blockage
Display Reading	Flashes every 1s	Flashes every 1s	Flashes every 1 s
Reason	<ol style="list-style-type: none"> the coil sensor terminals are not securely plugged in. The coil sensor fault. If not above question, It maybe is display panel PCB fault. 	<ol style="list-style-type: none"> The humidity sensor terminals are not securely plugged in. The humidity sensor fault If not above question, It maybe is display panel PCB fault. 	Water is not draining from the pump reservoir or there is a lack of power to the water pump.

Remedy	<ol style="list-style-type: none"> 1. Check to ensure the coil sensor terminal is securely plugged in. 2. Replace the coil sensor . 3. Replace display panel PCB 	<ol style="list-style-type: none"> 1. Check to ensure the humidity sensor terminal securely plugged in. 2. Replace the humidity sensor . 3. Replace display panel PCB 	<ol style="list-style-type: none"> 1. Make sure maximum lift is not exceeded. End of hose should be no higher than 10 feet above the unit. 2. Check pump for debris or blockage.
--------	---	--	--

If these solutions do not correct the error, contact your local distributor.

SPECIFICATION

Dehumidifying Capacity (30°C/ 80% RH)	75 liters/day
Power Supply:	220-240V /50Hz, 920W/4A
Refrigerant:	R410A/720g
Working Temperature:	5°C~35°C
Controls	Electronic Touchpad
Process Air	620m3/h
Unit Size(mm):	672x422x450
Packing Size(mm):	715x465x515
Net/Gross Weight(kgs):	42/45