

# MACH 4 POWER BREEZER MISTING FAN



# **USER MANUAL** SAVE THESE INSTRUCTIONS FOR FUTURE REFERENCE



## TABLE OF CONTENTS


TABLE OF CONTENTS	2
WARNINGS	3
KEY COMPONENTS	4
SETUP	6
MOUNTING THE FAN HEAD	6
USING THE CORRECT OUTLET	9
ADDING WATER TO THE WATER TANK	10
ROUTING POWER AND WATER LINES AND REPLACING TANK LID	10
OPERATION	11
CONTROL PANEL – BUTTONS	11
TURNING ON YOUR POWER BREEZER	11
ADJUSTING THE MISTING LEVEL	12
DISASSEMBLY	13
DISMOUNTING FAN HEAD	14
ROUTING POWER AND WATER LINES AND REPLACING TANK LID	15
MOVING / TRANSPORTING YOUR POWER BREEZER	16
MAINTAINING YOUR POWER BREEZER	16
MAINTAINING THE WATER TANK	
MAINTAINING THE FAN HEAD AND MOTOR	16


## WARNINGS

- This Power Breezer is intended for use only as specified in this manual. If you have questions about its use, please contact Power Breezer. **844.233.5673 | customerservice@powerbreezer.com**
- Use only on a outlet protected by a ground-fault circuit-interrupter (GFCI). (see page 10)
- Avoid using extension cords.
- Do not allow plug to become wet. Do not plug in while hands are wet. Doing so causes risk of electric shock.
- Do not alter the plug in any way.
- If the power cord is damaged, do not attempt to repair it yourself. Contact Power Breezer customer service for assistance. 844.233.5673 | customerservice@powerbreezer.com
- Turn off and unplug the Power Breezer prior to filling or emptying water reservoir.
- Turn off and unplug the Power Breezer prior to moving.
- Turn off and unplug the Power Breezer prior to cleaning it.
- Always unplug the Power Breezer by pulling on the plug and never on the cord.
- Do not insert fingers or other objects inside the fan head, doing so may cause bodily injury.
- Children can fall into open water reservoir and drown, even in a small amount of water. Keep children away from reservoir. Keep the water tank lid on at all times.
- Closely supervise nearby children and pets when using this Power Breezer. Do not leave Power Breezer unattended.
- Children shall not play with the Power Breezer.
- Cleaning and user maintenance shall not be made by children without supervision.
- The Power Breezer is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.
- This Power Breezer can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the Power Breezer in a safe way and understand the hazards involved.
- When operating Power Breezer, use common sense. Stay clear of moving parts and only use water that is safe for drinking.
- If the Power Breezer becomes damaged or malfunctions, do not attempt to repair the Power Breezer. Doing so will void the warranty. Contact Power Breezer customer service for repair assistance. 844.233.5673 | customerservice@powerbreezer.com
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction" or equivalent.
- This Power Breezer is suitable for use as a fan for tropical climates.
- This Power Breezer is suitable for use outdoors.
- This Power Breezer is intended for industrial use.
- This Power Breezer is rated IP24.
- Do not throw away this user manual, keep it for reference.




## **KEY COMPONENTS**

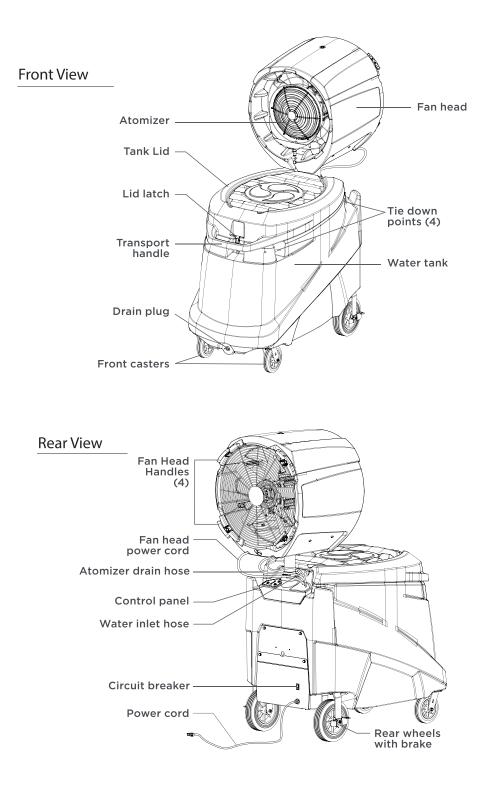

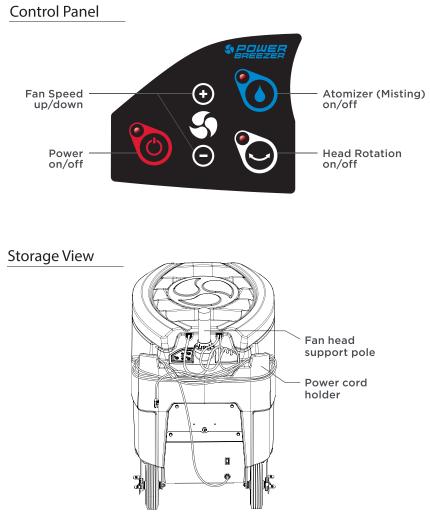

Inside Water Tank View

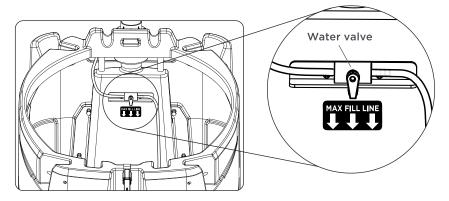





### SETUP

#### **MOUNTING THE FAN HEAD**



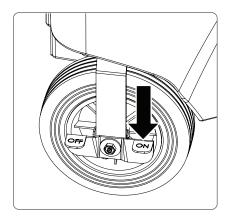

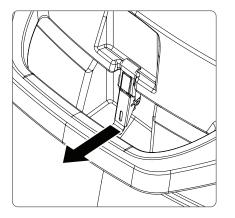

To set up your Power Breezer, you will need:


- 2 people
- An AC outlet
- Access to water to fill the water tank

Remember:


- Lift fan head only by the head handles.
- **Never** lift from the fan guards.
- The fan head weighs 86 lbs.


Before you get started, be sure to lock both of the **rear wheels** by pressing down on the brake lever to set them to the **ON** position.

Open the **lid latch** by first pulling forward the lower portion of the latch.

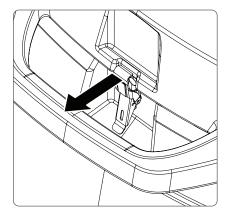



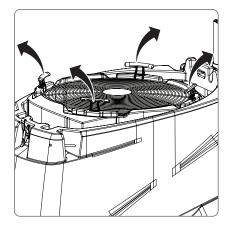

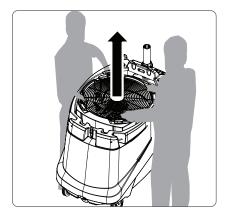

Finish opening the **lid latch** by pulling the upper portion of the latch forward and away from the lid.

Remove **tank lid** by first lifting up on the **transport handle** and then pulling forward.

Tilt up the four **fan head handles**, if they are folded down, prior to lifting the head.

To lift the fan head out of the water tank, each person should stand on opposite sides of Power Breezer.

Both people should grasp the fan head by the fan head handles, as shown.

Remember:


- Lift fan head only by the head handles.
- **Never** lift from the fan guards.



USER MANUAL






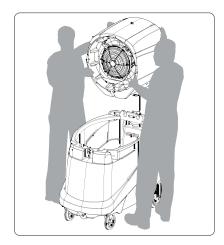

Lift the **fan head** straight up and out of the **water tank**. Carefully rest it on the **edge of the water tank**.

Both people should re-adjust their grip so that they have one hand on a **fan head handle** or the black outer housing and one hand on the front edge of the **fan head**, as shown.

Once again, lift the **fan head** and **align it with** the **fan head support pole**. Once the **fan head** is seated on the **support pole**, rotate the **fan head** horizontally until you feel it engage with the **support pole**.

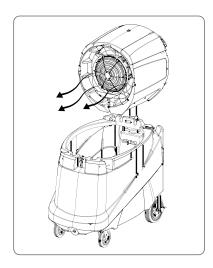


Once installed, the **atomizer** (metal disk) will be facing the **water tank**, air will be blown over the **water tank** when the Power Breezer is turned on.

#### USING THE CORRECT OUTLET

Electrical current of 110v or 220v is required. For safety, only plug your Power Breezer into an outlet equipped with GFCI.


#### DO NOT plug into standard outlet without a GFCI feature.

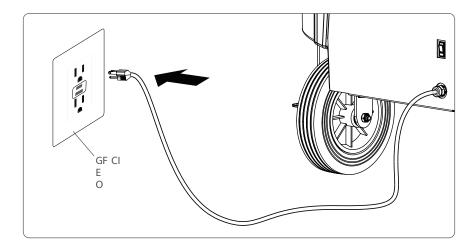

**NOTE:** A live power outlet can be verified when the Power Breezer is **plugged in and powered off** by pressing the **oscillation** or **atomizer** buttons. The LED lights will dimly illuminate when either of these buttons are depressed.




#### ADDING WATER TO THE WATER TANK

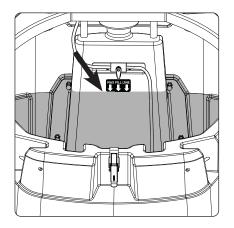


Do not fill the **water tank** above the **max fill level**, as shown. If **water tank** is filled past this level, water may leak out of the **water tank** and cause a hazard around the Power Breezer.

The **water valve** can be adjusted for optimal performance according to your climate. To adjust, please follow the steps in the **Operation - Adjusting the misting level** section of this manual.

#### **ROUTING POWER AND WATER LINES AND REPLACING TANK LID**

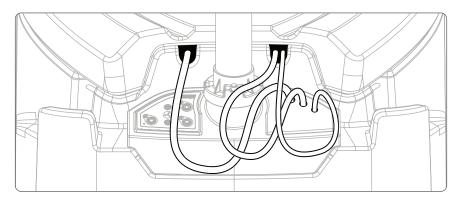

Route the **fan head power cord, atomizer drain hose, and water inlet hose** through the openings in the back of the **water tank** as shown above.

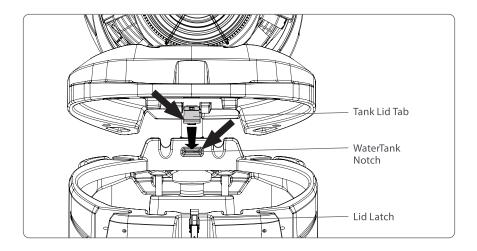


Note the tank lid tab on the back underside of the tank lid.

- Slide the lid tab into the corresponding water tank notch in the back of the water tank as shown above.
- Lower the front of the **tank lid** onto the **water tank** and re-lock the **lid latch**.

### **OPERATION**

#### **CONTROL PANEL – BUTTONS**

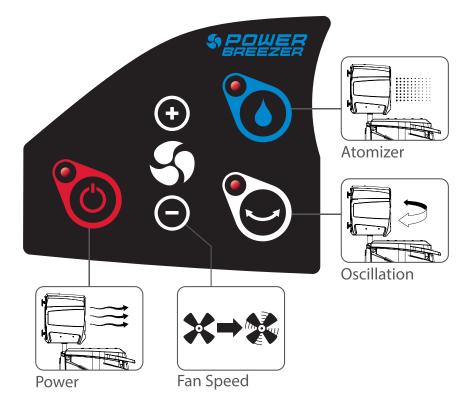



#### **TURNING ON YOUR POWER BREEZER**

- 1. Press the **power button** and hold for one second. The LED light for the power button will be lit and the fan blades will begin to slowly rotate to indicate the Power Breezer is powered on.
- 2. Press the **fan speed button** e to increase the fan speed. Adjust the fan speed by pressing the e or e buttons.
- 3. Press the **oscillation button** once to activate the oscillation feature.
- 4. Press the **atomizer button O** once to activate the misting feature.




### ADJUSTING THE MISTING LEVEL

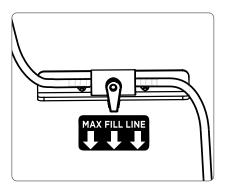

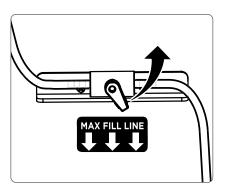



- 1. Press the **power button** (2) and **hold for one second** if Power Breezer is not already on.
- 2. Set fan speed to desired level.
- 3. Locate the **water valve**. The **water valve** is inside the **water tank** towards the rear.
- 4. Start with the **water valve** closed, at the 6 o'clock position as shown.
- 5. Start the atomizer by pressing the **atomizer but**-**ton O** once.
- Open the **water valve** slightly by turning the lever counterclockwise. There will be a short delay before misting begins. Check the distance of the mist.
- If there is a strong mist at 6 feet away, then the moisture setting is too high for conditions. To reduce misting, rotate the **water valve** lever clockwise back towards the 6 o'clock position.

Optimal moisture settings can also be adjusted according to personal preference.

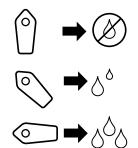

### DISASSEMBLY

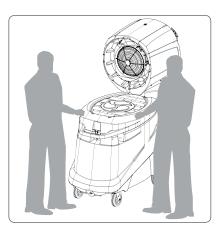

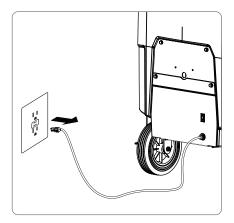

To disassemble your Power Breezer, you will need:

2 people

Remember:

- Lift **fan head** only by the black outer shell from the top and bottom.
- **Never** lift from the fan guards or metal disk.
- The Fan Head weighs 86 lbs.
- Power off the Power Breezer by holding down the power button O for one second.
- 2. Unplug **power cord.**


#### Drain water tank:

Depending on the volume of water to be drained, you may want to move your Power Breezer to a suitable location prior to draining.

Open the **drain plug** by turning counter clockwise and fully drain the **water tank.** 




### **DISMOUNTING FAN HEAD**

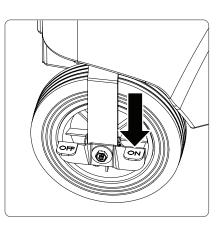

Before you get started, be sure to lock both of the **rear wheels** by pressing down on the brake lever to set them to the **ON** position.

- Unlock lid latch.
- Remove the **tank lid** by first lifting up on the **transport handle** and then pulling forward.



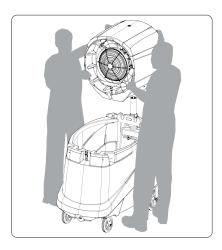

Lift the **fan head** straight up and off the **head support pole.** 




Carefully rest the **fan head** on the **edge of the tank**. Both people should grasp the **fan head** by the **fan head handles**, as shown.

Remember:

- At this step, lift the **fan head** only by the **head** handles.
- **Never** lift from the fan guards.


Carefully lower the fan head into the water tank.

#### ROUTING POWER AND WATER LINES AND REPLACING TANK LID

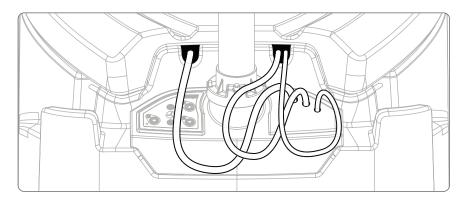

• Route the **fan head power cord, atomizer drain hose, and water inlet hose** through the openings in the back of the **water tank** as shown above.



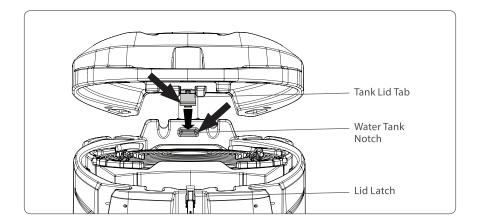

Note the lid tab on the back underside of the lid.

- Slide the lid tab into the corresponding water tank notch in the back of the water tank as shown above.
- Lower the front of the lid onto the water tank and re-lock the lid latch.

### **MOVING / TRANSPORTING YOUR POWER BREEZER**

**DO NOT reposition or move** your Power Breezer by the **fan head** (if mounted) or the **fan head support pole** (if stored). Doing so may damage your Power Breezer. Only reposition or move your Power Breezer by the **transport handle**.

Prior to transporting your Power Breezer over long distances, disassemble the Power Breezer to prevent damage. Use the **tie down points** to limit movement and prevent damage. Also make sure both **rear wheel locks** are engaged in the **ON position** to prevent rolling.

For long-term storage, make sure that the water tank is fully dry. If it is not dry, you may use the fan to dry it.

• With the **fan head** in the **water tank**, and the **tank lid removed**, turn on the fan using a medium speed until the **water tank** is dry.


### MAINTAINING YOUR POWER BREEZER

For the best performance and longest life of your Power Breezer, we recommend the following maintenance on your Power Breezer every **30 days and prior to storing for extended periods of time.** 

#### MAINTAINING THE WATER TANK

- The Power Breezer was designed with easy cleaning in mind.
- Once a week drain the water tank and allow for the water tank to dry out overnight.
- If the inside of the water tank becomes slippery/slimy to the touch, drain the Power Breezer. You can also clean
  the water tank by putting a few drops of liquid soap in water and brushing the inside of the water tank with it.
  Rinse the water tank with a hose, then open the drain plug at the bottom and leave the tank lid off to allow to
  air dry.

#### MAINTAINING THE FAN HEAD AND MOTOR

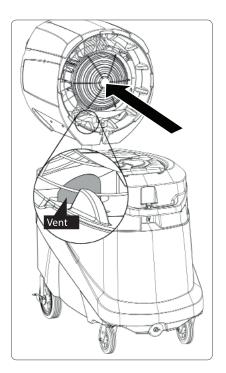

If you see a collection of dust or debris in the head of the Power Breezer, clean the Power Breezer with a water hose.

**Spray from the front of the fan head.** Use a clean cloth to wipe it down.

Avoid spraying water directly into the vent.

